

Thank you for purchasing an Outdoor Revolution product. This product will give years of satisfactory service if basic instructions are followed. Our products are designed for durability, longevity and ease of erection.



WWW.OUTDOOR-REVOLUTION.COM

UNIT 1 BRICK PARK
BRETFIELD COURT
BRETTON STREET INDUSTRIAL ESTATE
DEWSBURY
WEST YORKSHIRE
WF12 9BY

In the interest of continuous development and improvements by Outdoor Revolution; some products or specifications may vary slightly from the photographs and information provided in this instruction manual. Dimensions and weights are approximate and intended as guidelines only.



Kalahari PC 7.0 Steel Side Canopy Instructions & Care Manual



IMPORTANT: PLEASE CHECK YOUR EQUIPMENT

1 x Flysheet (Or Outer)

1 x Steel Pole

1 x Bag of Ground Pegs

1 x Carry Bag

Guylines



We highly recommend that you insure your canopy against storm damage, or accidental damage, as the warranty does not cover such eventualities. The manufacturer **IS NOT** liable for any damage caused to the canopy, or its contents, due to misuse, incorrect pitching or extreme weather; full warranty details can be found on the rear of this booklet.

- Damage caused by incorrect maintenance of the product.
- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric as a result of accelerated UV degradation due to long term pitch .
- Water ingress through seams caused by excessive abrasion of seams or taped seam.
- Broken zips caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays.

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

Please contact your retailer immediately (even if purchased online) if you feel your Outdoor Revolution product has a genuine warranty issue. The retailer, in turn will raise the issue with ourselves and we will action; with the retailer, according to the nature of the claim.

Returning Products

Please ensure the product is clean and dry and as close to its original condition as possible before sending back for checking. Wet or dirty products will not be accepted back for checking/warranty claims.

It is important to note that the Sales Contract between yourself and the retailer you purchased the Outdoor Revolution product from, remains valid throughout any warranty claim and your statutory rights are not affected.

OUTDOOR REVOLUTION GUARANTEE

Outdoor Revolution products are designed and produced to the very highest of manufacturing standards, using the best quality fabrics or components available for each specific model. Rigorous quality control of finished products is in place.

All manufactured products are:

- Quality controlled to be free from minor defects.
- Fit for the purpose that they are intended for.
- Manufactured to a satisfactory quality.

It is important that correct care is taken when opening, erecting, using, and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guidelines may cause unnecessary damage to the product (see formal instructions for handling/erection tips). A repair kit is included with each of our products to help resolve any minor issues.

THE WARRANTY

The Outdoor Revolution Warranty lasts for twelve months from the original date of purchase; please keep all receipts or copies of any relevant transaction to substantiate the purchase date. This warranty only covers the workmanship, fabric and components. Any faults found within six months of purchase will be investigated by Outdoor Revolution. Faults found outside of the initial six months of purchase will need to be proven by you, the purchaser, in line with current consumer legislation, after the short term right to reject has concluded. **Please note that this warranty requires registration on our website.**

Retailer will not refund a purchase if no fault is found.

The manufacturer's warranty does not cover the following:-

- General wear and tear over extended periods of use or, seasonal pitching of the product.
- Accelerated UV damage caused by excessive, long term sun exposure.
- Accidental damage caused by but not exclusive to, human, animal or weather.

IMPORTANT INFORMATION

- ◆ Please do not leave for your holiday without fully erecting and checking that you have all the listed contents for your canopy. If you are missing anything, then please contact your retailer immediately before use.
- ◆ Please note that man-made fabrics are prone to condensation, when the warm air and moisture within the canopy, comes into contact with the colder air on the outer material; this is a perfectly natural occurrence and should not be confused with leaking. Please ensure that any available ventilation points remain open, wherever possible, in order to help combat condensation.
- ◆ We suggest that you pitch your canopy for some period before use, enabling it to undergo the 'weathering' process. Weathering sometimes requires a few uses of the canopy, before it becomes fully effective. Seam sealant can be used to resolve any persistent weeps; this is a natural process. 'Weathering' is the process of allowing your canopy to become soaked, then completely dry, approximately two to three times to reinforce the waterproofing of the seams/stitching on the polycotton.
- ◆ Please ensure that you site the canopy on clear/level ground before erecting, with no sharp objects beneath and zips fully closed. We suggest placing a groundsheet underneath the canopy to keep it dry/clean.
- ◆ We suggest conducting a trial run of your canopy to familiarise yourself with the assembly and usability of the model. Should you have any issues in relation to pitching your canopy; please contact your dealer for assistance before your holiday.
- ◆ Please note that this model is designed for short term use and not long term pitch.
- ◆ Always properly dry/air the canopy after use, before packing away, to prevent mildew or mould from developing.
- ◆ Any dirt or stains can be removed by brushing, or gently washing, using warm water. DO NOT use detergents, as this will destroy the waterproofing of the materials.
- ◆ DO NOT cook or smoke inside this canopy, as despite the outer fabric being flame retardant; it will still melt.
- ◆ In the event of damage; please contact your retailer. If, for whatever reason, you are unable to contact them, then please email cs@blue-diamond-products.co.uk and our dedicated customer service team will be pleased to assist you.
- ◆ Please avoid using this canopy in temperatures below freezing, as this can result in a detrimental impact on the steel pole frame.
- ◆ DO NOT use 'Awning Reproofers' on this model, as this can have detrimental effects on the breathability of the polycotton. After undergoing the 'weathering' process; this model should be adequately acclimatised.
- ◆ Always store your canopy flat, never on the side of the bag, as this can cause damage to the steel pole frame; this bag should be stored in a cool/dry area.

PLEASE READ THE FOLLOWING ERECTION INSTRUCTIONS CAREFULLY

TIP: Refer to these photographs when pitching your 'Kalahari PC 7.0 Steel Side Canopy.



1. Spread the canvas out on the ground, with the longer zip laid near the side of your family tent.




2. Attach the canopy to the side of the family tent using the sewn in zip.



3. Locate the telescopic steel pole and assemble each of the sections together.



4. Thread the pole through the sleeve and insert the metal pin from the 'Ring & Pin', pinning it into the bottom of the pole on each side.

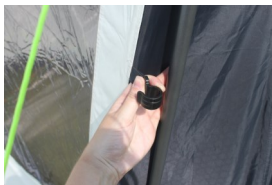

5. Clip each of the black 'C' clips onto the exposed sections of the pole to firmly hold them in position.

6. Secure the canopy, using any available adjustable pegging straps, to tension the canopy as much as you desire; please ensure that you do not over-tension the material whilst doing this.



7. Please ensure that you secure any available guylines, pegging points, or storm straps, for maximum stability during adverse weather conditions.

PACKING AWAY YOUR CANOPY

- ◆ Zip up any windows/doors before deflating.
- ◆ Unpeg any guylines, storm straps and most of the pegs around the canopy, leaving each of the four corners pegged out.
- ◆ Unpeg each of the four corners.
- ◆ Please unzip the canopy from your family tent before packing away.



Allow the canopy to collapse on itself, before compressing the canvas as much as possible.

Fold the canopy on itself vertically to form a rectangular shape.



Fold the canopy on itself to create a streamlined 'sausage' shape. Measure the width of the canopy against the bag to ensure it will fit inside. Begin rolling the model, pushing out any air as you roll.

Rotate the rolled canopy onto the carry bag, pull the sides up around it, then zip up the bag.

