

Thank you for purchasing an Outdoor Revolution product. This product will give years of satisfactory service if basic instructions are followed. Our products are designed for durability, longevity and ease of erection.



WWW.OUTDOOR-REVOLUTION.COM

UNIT 1 BRICK PARK
BRETFIELD COURT
BRETTON STREET INDUSTRIAL ESTATE
DEWSBURY
WEST YORKSHIRE
WF12 9BY

In the interest of continuous development and improvements by Outdoor Revolution; some products or specifications may vary slightly from the photographs and information provided in this instruction manual. Dimensions and weights are approximate and intended as guidelines only.



SCREENHOUSE 5

INSTRUCTIONS & CARE MANUAL



IMPORTANT: PLEASE CHECK YOUR EQUIPMENT

1 X FLYSHEET (OR OUTER)

1 X FIBREGLASS POP UP SYSTEM

1 X BAG OF GROUND PEGS

1 X SEPARATE PEG DOWN GOUNDSHEET

1 X CARRY BAG

1 X REPAIR KIT

GUYLINES



We highly recommend that you insure your gazebo against storm damage, or accidental damage, as the warranty does not cover such eventualities. The manufacturer IS NOT liable for any damage caused to the gazebo, or its contents due to misuse, incorrect pitching or extreme weather; full warranty details can be found on the rear of this booklet.

- Damage caused by incorrect maintenance of the product.
- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric as a result of accelerated UV degradation due to long term pitch .
- Water ingress through seams caused by excessive abrasion of seams or taped seam.
- Broken zips caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays.

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

Please contact your retailer immediately (even if purchased online) if you feel your Outdoor Revolution product has a genuine warranty issue. The retailer, in turn will raise the issue with ourselves and we will action; with the retailer, according to the nature of the claim.

Returning Products

Please ensure the product is clean and dry and as close to its original condition as possible before sending back for checking. Wet or dirty products will not be accepted back for checking/warranty claims.

It is important to note that the Sales Contract between yourself and the retailer you purchased the Outdoor Revolution product from, remains valid throughout any warranty claim and your statutory rights are not affected.

OUTDOOR REVOLUTION GUARANTEE

Outdoor Revolution products are designed and produced to the very highest of manufacturing standards, using the best quality fabrics or components available for each specific model. Rigorous quality control of finished products is in place.

All manufactured products are:

- Quality controlled to be free from minor defects.
- Fit for the purpose that they are intended for.
- Manufactured to a satisfactory quality.

It is important that correct care is taken when opening, erecting, using, and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guideline may cause unnecessary damage to the product (see formal instructions for handling or erection tips). A repair kit is included with each of our products to help resolve any minor issues.

THE WARRANTY

The Outdoor Revolution Warranty lasts for twelve months from the original date of purchase; please keep all receipts or copies of any relevant transaction to substantiate the purchase date. This warranty only covers the workmanship, fabric and components. Any faults found within six months of purchase will be investigated by Outdoor Revolution. Faults found outside of the initial six months of purchase will need to be proven by you, the purchaser, in line with current consumer legislation, after the short term right to reject has concluded. **Please note that this warranty requires registration on our website.**

Retailer will not refund a purchase if no fault is found.

The manufacturers warranty does not cover the following:-

- General wear and tear over extended periods of use or, seasonal pitching of the product.
- Accelerated UV damage caused by excessive, long term sun exposure.
- Accidental damage caused by but not exclusive to, human, animal or weather.

IMPORTANT INFORMATION

- ◆ Please do not leave for your holiday without fully erecting and checking that you have all of the listed contents for your gazebo. If you are missing anything, then please contact your retailer immediately before use.
- ◆ Please note that man-made fabrics are prone to condensation, when the warm air and moisture within the gazebo, comes into contact with the colder air on the outer material. This is a perfectly natural occurrence and should not be confused with leaking. Please ensure that all ventilation points remain open, wherever possible, in order to help combat condensation.
- ◆ We suggest that you pitch your gazebo for some period before use, enabling it to undergo the 'weathering' process. Weathering sometimes requires a few uses of the gazebo, before it becomes fully effective. Seam sealant can be used to resolve any persistent weeps; this is a natural process. 'Weathering' is the process of allowing your gazebo to become soaked, then completely dry, approximately two to three times, in order to reinforce the waterproofing of the seams/stitching on the fabric.
- ◆ Please ensure that you site the gazebo on clear/level ground before erecting, with no sharp objects beneath and zips fully closed. We suggest placing a groundsheet underneath the gazebo to keep it dry/clean.
- ◆ We suggest conducting a trial run of your gazebo to familiarise yourself with the assembly and usability of the model. Should you have any issues in relation to pitching your gazebo; please contact your dealer for assistance before your holiday.
- ◆ Please note that this model is designed for short term usage and not long term pitch.
- ◆ Always ensure that you dry/air the gazebo after use, before packing it away, in order to prevent mildew or mould from developing.
- ◆ Any dirt or stains can be removed by brushing, or gently washing, using warm water. DO NOT use detergents, as this will destroy the waterproofing of the materials.
- ◆ DO NOT cook or smoke inside this gazebo, as despite the outer fabric being flame-retardant, it will still melt.
- ◆ In the event of damage; please contact your retailer. If, for whatever reason, you are unable to contact them, then please email cs@blue-diamond-products.co.uk and our dedicated customer service team will be pleased to assist you.
- ◆ Please avoid using this gazebo in temperatures below freezing, as this can result in a detrimental effect on the fibreglass pop up system.
- ◆ Always store your gazebo flat, never on the side of the bag, as this can cause damage to the fibreglass pop up system; this bag should be stored in a cool/dry area.

PLEASE READ THE INSTRUCTIONS CAREFULLY

TIP: Refer to these photographs for assistance when pitching your **Screenhouse 5**.



1. Please spread the canvas out on the ground, as flat as possible, wherever you wish to pitch it.

2. Secure the four corners of the gazebo, using any pegging points, to keep the gazebo in position, whilst you pitch it; these may require readjustment afterwards.



3. Fold up each of the poles on the pop up fibreglass frame, as demonstrated in the left hand image, ensuring that all ends are touching.

4. Raise the top panel, whilst pulling each side panel out, using the corresponding metal loops on either side, causing the fibreglass pole frame to pop into place. We suggest having two people to do this; one to hold the roof in position, whilst another pulls out the sides. If you are experiencing trouble when gripping these loops, then we suggest threading through a guyline for more leverage.



5. Following the first four steps should leave the gazebo as shown in the image on the left hand side. Climb into the gazebo and push up the roof panel from inside.

6. Secure any remaining pegging points, or guylines, or storm straps, starting from one corner, before working your way around the gazebo, in order to firmly hold the gazebo in place.



7. Peg down the groundsheet using the designated eyelets, whilst ensuring the groundsheet itself remains as taut as possible. Fold each of the mud wall flaps over this to prevent draughts.

12 MONTH WARRANTY

On the Workmanship & Canvas Against Any Manufacturing Faults.

PACKING AWAY YOUR GAZEBO

- ◆ Zip up any windows/doors before packing away your gazebo.
- ◆ Unpeg all guylines, storm straps and most of the pegs from around the gazebo, leaving only the four corners secured.
- ◆ Unpeg each of the four corners.
- ◆ Fold each panel on the gazebo down to return the fibreglass pop up frame system into its original position.



Remove the vertical roof support struts by the doorway.

Climb inside the gazebo and down pull down the roof panel.



Push in each of the side panels, allowing the gazebo to collapse on itself and return to its original position.

Fold up each of the poles on the fibreglass pop up system, as demonstrated in the right hand image, before pushing this into the designated carry bag; compress this as much as you desire for ease of transportation, however, be careful to not damage the frame.

