



Thank you for purchasing an Outdoor Revolution product, this product will give years of satisfactory service if basic instructions are followed, our products are designed for durability and for ease of erection.

****We highly recommend that you insure your awning against storm damage or accidental damage, as the warranty does not cover such eventualities. The manufacturer is not liable for any damage caused to the caravan or vehicle because of misuse, incorrect pitching or extreme weather****

Spare poles can be purchased to replace broken poles

** Porch awnings will not be swapped because of broken poles**

Please read the following instructions carefully

TIP: Refer to the photograph to help when pitching your Porchlite Plus.

- Please do not leave for your vacation without fully erecting and checking the contents of your porch.
- Ideally erect your porch for some period allowing it to weather.
- Please make sure that before erecting, that you site the porch on clear Level ground with no sharp objects underneath, and that all the zips are fully closed. (We recommend laying a groundsheet down to keep the awning Dry and clean)
- If you have any issues relating to pitching your awning please contact your dealer for instructions before going on holiday.

IMPORTANT PLEASE CHECK YOUR EQUIPMENT

(Make yourself familiar with the awning and its parts before attempting to erect)

Contents

Flysheet (or outer)

Fibreglass poles (in a separate bag)

Pegs (in a separate bag)

Outer carrying bag (with dimension details)

Stability Straps x 2

Inner tent

Groundsheet

ERECTION INSTRUCTIONS.

Outdoor revolution tents are all erected outer first

1. Lay the outer spread out on the ground.
2. Open the pole bag and assemble the poles
3. When the poles are assembled proceed to slide carefully through the seam (taking care not to damage the seam) to the other side of the seam. Continue to do this with both poles .SPARE POLES CAN BE PURCHASED FROM WWW.OUTDOOR-REVOLUTION.COM, spares section
4. Place the metal pin, which is on the steel ring into the bottom of the pole, one at once, along one side of the tent.
5. Now take the opposite end of the pole and push steadily, while holding the metal ring, when fully through put the other ring in the bottom of the pole. This now has formed the dome shape. Repeat this for all the poles
6. You are now ready to peg the tent out, (**unless fastening to a caravan- see notes below*****) Firstly, make sure all zips are closed. Starting at one corner; peg all the pegging points around the tent. (Take care not to over tighten the tent, if a door zip is tight it is probably stretched two tight)
7. Suspend (rear of inner first) the inner from the eyelets on the outer.
8. Guy lines can now be tensioned and pegged, please ensure in heavy weather that ALL guy lines are used. (Please note that failure to use all the lines may result in your tent being damaged)
9. You are now ready to back your vehicle up to the Movelite. Use the flange to cover the roof of your vehicle and tension the elastic toggles to create a better weather seal.
10. The 2 metal poles can be used to form a canopy on the doors. (Only fitted with larger models)

*****Note**, To fasten the movelite to a caravan, you will need to purchase a driveaway kit consisting of double edged awning piping an figure 8 joining strips. Simply slide into the awning rail, then the tent is lined up and the figure 8 is positioned to join the two.

Please note these few points for trouble free camping.

- a. **After use please you always dry and air the tent before packing away.**
- b. **Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents as this will destroy the waterproofing on the fabrics.**
- c. **We advise that you DO NOT cook or smoke in this tent; although the outer fabric is fire retardant treated it will still melt.**
- d. **Please make sure that you have a good time.**

Outdoor Revolution Tents are distributed by:
Blue Diamond Products Ltd