



Thank you for purchasing an Outdoor Revolution product, this product will give years of satisfactory service if basic instructions are followed, our products are designed for durability and for ease of erection.

Spare poles can be purchased to replace broken poles
** Porch awnings will not be swapped because of broken poles**

Please read the following instructions carefully

TIP: Refer to the photograph to help when pitching your Annexe.

- Please do not leave for your vacation without fully erecting and checking the contents of your annexe.
- Ideally erect your annexe for some period allowing it to weather.
- Please make sure that before erecting, that you site the annexe on clear Level ground with no sharp objects underneath. (We recommend laying a groundsheet down to keep the annexe dry and clean)
- If you have any issues relating to pitching your annexe please contact your dealer for instructions before going on holiday.

IMPORTANT PLEASE CHECK YOUR EQUIPMENT

(Make yourself familiar with the annexe and its parts before attempting to erect)

Contents

Flysheets (or outer)

2 x steel vertical poles 1 x curved top pole

Pegs in separate bag

ERECTION INSTRUCTIONS.

Outdoor revolution tents are all erected outer first

1. Lay the outer/flysheet spread out on the ground. Slacken adjusters off on the black tapes (near the ring and pin assemblies) around the foot of the awning.
2. Open the pole bag and lay the poles out on the ground. Take the shaped steel pole and attach the 2 legs to it. SPARE POLES CAN BE PURCHASED FROM WWW.OUTDOOR-REVOLUTION.COM, spares section.
3. Now decide which side of the awning you want the annexe and zip out the relevant panel. Take the annexe fly sheet and zip in.
4. Next take the frame you have assembled inside the annexe and offer up. The frame will be a 'goal post' shape and should be positioned at an angle with the curved section pushed into the roof section at the back. After this attach the ring of the 'ring and pin' assembly at the bottom of the canvas to tension the pole.
5. Now go outside the annexe and guy out the back of the flysheet. After this you are now ready to peg the annexe out
6. You are now ready to place the inner tent into position (suspending rear of inner first followed by the front) from the eyelets on the inside of the flysheet outer
7. Guy lines can now be tensioned and pegged on the annexe, please ensure in heavy weather that *ALL* guy lines and stability straps are used. (Please note that failure to use all the lines may result in your tent being damaged

Please note these few points for trouble free camping.

- a. **After use please you always dry and air the tent before packing away.**
- b. **Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents as this will destroy the waterproofing on the fabrics.**
- c. **We advise that you DO NOT cook or smoke in this tent; although the outer fabric is fire retardant treated it will still melt.**
- d. **Please make sure that you have a good time.**

****We highly recommend that you insure your annexe against storm damage or accidental damage, as the warranty does not cover such eventualities. The manufacturer is not liable for any damage caused to the caravan or vehicle because of misuse, incorrect pitching or extreme weather****

Outdoor Revolution Tents are distributed by:
Blue Diamond Products Ltd