



Thank you for purchasing an Outdoor Revolution product, this product will give years of satisfactory service if basic instructions are followed. Our products are designed for durability and for ease of erection.

**\*\*We highly recommend that you insure your tent against storm damage or accidental damage, as the warranty does not cover such eventualities. The manufacturer is not liable for any damage caused to the tent or its contents because of misuse, incorrect pitching or extreme weather\*\***

Spare poles can be purchased to replace broken poles,  
**\*\*New tents will not be swapped because of broken poles\*\***  
Tents will only be swapped at Outdoor Revolutions discretion.

Please read the following instructions carefully

TIP: Refer to the photograph to help when pitching your VRX330s

- Please do not leave for your vacation without fully erecting and checking the contents of your tent.
- Ideally erect your tent for some period allowing it to weather.
- Please make sure that before erecting, that you site the tent on clear ground with no sharp objects under the groundsheet, and that all the zips are fully closed. We recommend putting a groundsheet down to keep your tent clean.
- If you have any issues relating to pitching your tent, please contact your supplier for further instructions before going on holiday

### **IMPORTANT PLEASE CHECK YOUR EQUIPMENT**

(Make yourself familiar with your tent and its parts before attempting to erect.)

#### Contents

Flysheet with sewn on groundsheet

Fibreglass poles (in a separate bag)

Pegs (in a separate bag)

Outer carrying bag (with dimension details)

## Inner tent

### ERECTION INSTRUCTIONS.

Outdoor Revolution tents are erected Flysheet first.

1. Lay the outer/flysheet spread out on the ground.
2. Open the pole bag and assemble the poles, Ensure the poles seat correctly in the metal ferrules as most tent damage is done at this point.
3. You will notice that the poles have different coloured ends to them, match the colour to the corresponding pole seam (the edge is trimmed the same as the colour on the pole end.) on your outer/flysheet.
4. When the poles are matched, proceed to slide carefully through the seam (taking care not to damage the seam) Starting at on end and working across the tent. Continue to do this with all poles.
5. Place the metal pin, which is on the steel ring at the base of the outer/flysheet into the bottom of the pole, one at once, **along one side of the tent.**
6. Now take the opposite end of the pole and push steadily, while holding the opposite metal ring, when fully through put the other ring in the bottom of the pole. **(Tip. When erecting larger tents it is useful for someone to get under the canvas and push the tent upwards to ease pressure on the poles)** This now has formed the tunnel shape. Repeat this for all the poles
7. You are now ready to peg the tent out, starting at the back; peg all the pegging points. Now steadily pull the whole tent forwards to create the finished shape and peg out at the front. **(Take care not to over tighten the tent.** if a door zip is tight it is probably stretched two tight). Now go round all the tent, pegging in all the pegging points.
8. Clip inner tent groundsheet to outer of tent using the special clips. Ensure the door is facing forward and then suspend (rear of inner first) the inner from the brass eyelets on the outer using the white plastic toggles.
9. Guy lines can now be tensioned and pegged, please ensure in heavy weather that ALL guy lines are used. (Please note that failure to use all the lines may result in your tent being damaged)
10. ENSURE THIS TENT IS PACKED AWAY DRY.

**Please note these few points for trouble free camping.**

- a. After use **please take extreme care when packing away.** Ensure the tent is dry (including the poles) and air the tent before packing away.
- b. Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents as this will destroy the waterproofing on the fabrics.
- c. We advise that you DO NOT cook or smoke in this tent; although the outer fabric is fire retardant treated it will still melt.
- d. During use, particularly during rain, avoid touching the outer fabric as this may cause moisture to be drawn into the tent.
- e. Please do not confuse condensation with leaking, to avoid this make sure ventilation panels are open while the tent is inhabited.
- f. Please make sure that you have a good time.

Outdoor Revolution Tents are distributed by:  
Blue Diamond Products Ltd  
[WWW.Blue-diamond-products.co.uk](http://WWW.Blue-diamond-products.co.uk)