



Thank you for purchasing an Outdoor Revolution product, this product will give years of satisfactory service if basic instructions are followed, Outdoor Revolution products are designed for durability and for ease of erection.

**\*\*We highly recommend that you insure your tent against storm damage or accidental damage, as the warranty does not cover such eventualities. The manufacturer is not liable for any damage caused to the tent or its contents because of misuse, incorrect pitching or extreme weather\*\***

Spare poles can be purchased to replace broken poles

**\*\* Tents will not be swapped because of broken poles\*\***

Damaged Tents will only be swapped at Outdoor Revolutions Discretion.

Please read the following instructions carefully

**TIP:** Refer to the photograph to help when pitching your Vrx Scenic 4.2.

- **Please do not leave for your vacation without fully erecting and checking the contents of your tent.**
- **Ideally erect your tent for some period allowing it to weather.**
- **Please make sure that before erecting, that you site the tent on clear Level ground with no sharp objects underneath, and that all the zips are fully closed. (We recommend laying a groundsheet down to keep the awning Dry and clean)**
- **If you have any issues relating to pitching your tent please contact your dealer for instructions before going on holiday.**
- **Please check the weather forecast prior to leaving for your vacation.**

**Contents**  
**Flysheet (or outer)**

**Inner tents (or inners)**  
**Fibre glass poles (in a separate bag)**  
**Pegs (in a separate bag)**  
**Outer carrying bag (with dimension details)**  
**Stability straps x 2 (extras supplied separately)**

## **ERECTION INSTRUCTIONS.**

Tip: refer to photograph when pitching your tent.  
Outdoor revolution tents are all erected outer first

1. Lay the outer/ flysheet spread flat on the ground with the pole sleeves on the top, ideally on the groundsheet to keep it clean.
2. Open the separate pole bag and begin to assemble the poles. You will notice each pole comes with **matching coloured ends**. Ensure that each pole section is inserted correctly into the metal ferruls as most tent and pole damage is done at this point.
3. Proceed to slide the poles carefully through the sleeve, (which are trimmed at the end with the same colour as their **corresponding pole ends**), taking care not to damage the sleeve. Continue to do this with all the poles, whilst leaving the flysheet on the ground.
4. Place the metal pins, which are located along the base of the flysheet on a ring, one at once, **inside** the bottom of the poles, **along one side of the tent first**.
5. Now take the opposite end of the pole, locate the opposite metal ring and pin and push the pole steadily, while holding the metal ring. When fully through the sleeve, put this other ring in the bottom of the steel side pole.
6. Once all poles are located and fitted, tighten the tension straps at the base of the poles and clip on the black plastic clips.
7. Now, raise the poles into the air. (**Tip. When erecting this tents it is useful for someone to get under the canvas and push the tent upwards to ease pressure on the poles**) This now has formed the tunnel shape. Now peg out the back edge of the tent only then begin to lift the whole tent forwards. Pull the whole tent forwards reasonably firmly and peg out the front of the tent.
8. You are now ready to peg the whole tent out, **Tip** pegs work best located at 45 degree angles into the ground. Starting at one corner, peg all the pegging points around the base of the tent. (**Take care not to over tighten the tent, Tip** if a door zip is tight, then the tent is probably over tensioned.)
9. Now go inside your tent and clip the inner tent groundsheets to the inside of the flysheet using the special clips and plastic hooks, ensuring the doorway of the inner tent is facing forward. Then suspend (the rear of the inner tent first) the inner tent from the brass eyelets on the outer using the white elasticised toggles.
10. Guy lines can now be tensioned and pegged, please ensure in heavy weather that ALL guy lines and the **stability straps** are used. (Please note that failure to use all the lines may result in your tent being damaged)
11. The 2 metal upright poles can be used to form a canopy on the doors by placing them in the brass eyelets at either side of the door bottom. (Only fitted with larger models)

**Please note these few points for trouble free camping.**

- a. **After use please take extreme care when packing away. Ensure the tent is dry (including the poles) and air the tent before packing away.**
- b. **Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents as this will destroy the waterproofing on the fabrics.**
- c. **We advise that you DO NOT cook or smoke in this tent; although the outer fabric is fire retardant treated it will still melt.**
- d. **During use, particularly during rain, avoid touching the outer fabric as this may cause moisture to be drawn into the tent.**
- e. **Please do not confuse condensation with leaking, to avoid this make sure ventilation panels are open while the tent is inhabited.**
- f. **Please make sure that you have a good time.**

Outdoor Revolution Tents are distributed by:  
Blue Diamond Products Ltd  
[WWW.Blue-diamond-products.co.uk](http://WWW.Blue-diamond-products.co.uk)